343081

LINEA 3000 Colour video entrance panel with wide angle camera

Description

2 WIRE wall-mounted pushbutton panel with zamak front cover and wide angle colour camera. White LEDs for the lighting of the shooting field in low light conditions. Can be configured for one-family or two-family installations. Can open an electrical door lock directly connected between S+ and S- clamps (18 V 4 A impulsive, 250 mA holding current, 30 0hm max). Nameplate lit by white LED.

Correlated devices

BT-343051 Rainshield

BT-343061 Flush mounted accessory
BT-350020 2-module flush mounted box

Technical data

Power supply from SCS BUS: 18 - 27 Vdc
Stand by absorption (with backlighting LEDs off): 15 mA
Stand by absorption (with backlighting LEDs on): 25 mA
Max. operating absorption: 245 mA
Colour sensor: 1/3"
Lens: F 2,35 mm


 $\begin{array}{lll} \text{Lens:} & & \text{F 2,35 mm f 2,2} \\ \text{Viewing angle:} & & \sim 110^{\circ} \, \text{on the diagonal} \\ \text{Resolution:} & & 330 \, \text{linee TTV lines (horizontal)} \\ \end{array}$

Viewing field lighting:White LEDsBrightness adjustment:AutomaticInterlace:2:1


Operating temperature: (-25) - (+70) °C Protection index: IP 54

Protection index against mechanical impact: IK 10

Front view without panel

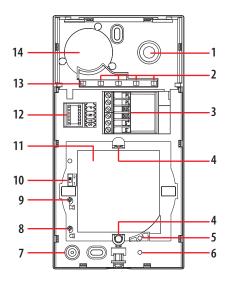

Dimensional data

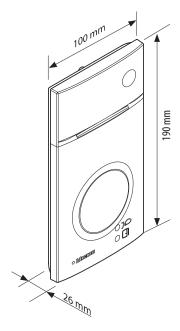


Legend

- 1. Camera
- 2. LED for the shooting field lighting
- 3. BUS connection clamps, door lock and local door release pushbutton
- 4. Call pushbuttons
- 5. Active connection notification LED
- 6. Open door notification LED
- 7. Microphone
- 8. Microphone volume adjustment
- 9. Loudspeaker volume adjustment
- 10. Switch
 - 1=one-family
 - 2=two-family
- 11.LED panel for call pushbutton lighting
- 12. Configurator socket
- 13. Brightness sensor for automatic activation of the night lighting
- 14. Loudspeaker

Installation and camera shooting range

The camera must not be installed in front of large light sources, or in places where the subject viewed remains in deep shadow. In poor lighting conditions cameras with colour are less sensitive than black/white cameras. An extra lighting source should be added in poorly lit rooms.

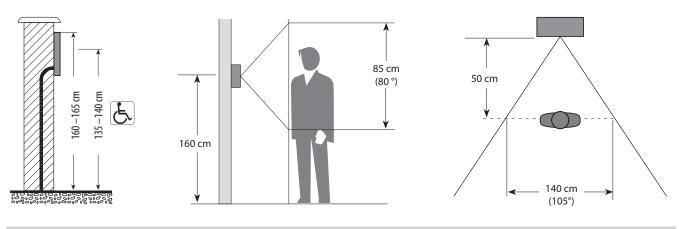

Configuration

The device must be (only physically) configured as follows:

P - entrance panel number

The configurator connected to the P housings of the speaker module assigns to the same an identification number within the system.

The numbering of the entrance panels must always start from P=0.

The entrance panel configured with P=0 must be a common (or main) entrance panel.

N - call number

Assigns the correspondence between the entrance panel pushbuttons and the audio handsets or video handsets. In the common entrance panels made with pushbutton modules, 1 must be inserted in N of the speaker module. The number of the first riser handset must be inserted in the local entrance panels in N.

T - door lock relay timing

configurator number							
0= No configurator	1	2	3	4*	5	6	7
4 sec.	1 sec.	2 sec.	3 sec.	pushbutt	6 sec.	8 sec.	10 sec.

^{*} Operation as pushbutton for 10 sec. max, after which standby mode is activated. To extend operation time over 10 seconds, use actuator 346210 configured with MOD=5.


S – type of call signal

S configuration sets the internal unit call tone and the enabling/disabling of the door lock release notification tone generated by the entrance panel.

One can thus differentiate the calls from different entrance panels.

Table (with door lock tone enabled) for Sprint L2 internal unit call signal						
Configurator	0	1	2	3		
Type of bell	2-tone	2-tone	2-tone	One-tone		
	1200Hz	1200Hz	1200Hz	1200Hz		
	600Hz	0 Hz	2400Hz			

Table (with door lock tone disabled) for Sprint L2 internal unit call signal						
Configurator	4	5	6	7		
Type of bell	2-tone	2-tone	2-tone	One-tone		
	1200Hz	1200Hz	1200Hz	1200Hz		
	600Hz	0 Hz	2400Hz			

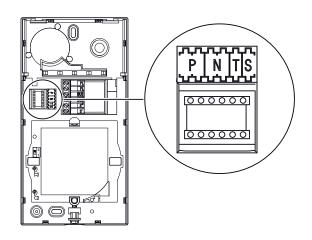

For the Classe 100 and Classe 300 internal units, the S configurator associates the entrance panel to the bell programmed in the internal unit.

Configurator	0	1	2	3	Door lock tone enabled
Configurator	4	5	6	7	Door lock tone disabled

In one-family systems S=9 (door lock tone enabled) or S=8 (door lock tone disabled) configure the General Call and make the internal unit ring, as with S=0 or S=4

