


# Cross connections


For HMD.2, HMF.4 ed FDP.2 terminal blocks

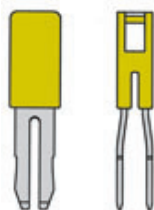

PH jumper



PHM jumper

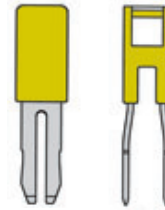


Terminal block	Jumper type	Cat. No.
HMD.2	PH/2,5-4	PH100
HMF.4	PH/2,5-4	PH100
FDP.2	PH/2,5-4	PH100

When there is the need to perform the cross connection between adjoining terminal blocks of different types (size and function), and an end section is interposed between them, a special PHM/2.5-4 increased pitch type jumper is available.

Terminal block	Jumper type	Cat. No.
HMD.2	PHM/2,5/4	PHM01
HMF.4	PHM/2,5/4	PHM01
HMD.2	PHD/2	PHD02

NOTE:  
To complete the insertion of the jumpers, the use of screwdriver is necessary.

PHD/2 jumper

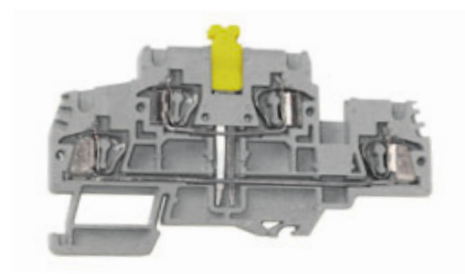

HMD.2/GR cat. no. HD100GR

## For mini spring-clamp terminal blocks

Terminal block	2-pole jumper		3-pole jumper		5-pole jumper	
	Type	Cat. No.	Type	Cat. No.	Type	Cat. No.
HP.2/P	PTC/2/02	PTC0202	PTC/2/03	PTC0203	PTC/2/05	PTC0205
HPC.2/P	PTC/2/02	PTC0202	PTC/2/03	PTC0203	PTC/2/05	PTC0205
HPP.2/P	PTC/2/02	PTC0202	PTC/2/03	PTC0203	PTC/2/05	PTC0205

