

F&F Filipowski L.P. Konstantynowska 79/81, 95-200 Pabianice, POLAND phone/fax (+48 42) 215 23 83 / (+48 42) 227 09 71 www.fif.com.pl: e-mail: biuro@fif.com.pl

AZH-S

Light dependent relay, with hermetic probe Ø10



Do not dispose of this device in the trash along with other wastel According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of give any amount to up to that end point of collection, as well as to store the occasion of give any amount of the occasion of the collection of



Purpose

Light dependent relay servers to switch-ON the lighting of streets, squares, shop windows, neon lamps etc, at twilinight and to switch-OFF afore mentioned lighting at down.

Functioning


The probe of relay should be situated at place with permanent access to day light, which, due to its changes of intensity, will cause switching ON and OFF the lighting. The exact time of switching the lighting can be set by potentiometer by the user. Turn in the direction of "half moon" will delay switching-ON, turning in the direction of "sun" will advance switching-ON. The relay is equipped with a delay system, which delays switching ON and OFF the lighting, thus eliminating the influence of accidental disturbances like thunder lightings on the relay functioning.

Mounting

- 1. To turn OFF supply.
- The relay fast upright (connection to down) to the substrate by two screws.
- The probe fast at place with permanent access to day light, which due to its changes of intensity, will cause switching ON and OFF the lighting.
- 4. The relay connect with connection diagram.
- 5. Set to switching threshold on the relay scale.

In the case of check the power to act the relay, all relay should be securely covered, e.g. by carton or dark mine cloth. Covered just probe "eye", e.g. by finger is insufficient because intensity of day light is very intense and penetrate to fotoresistor by the plastic box and human body.

Wiring diagram

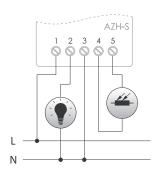

Technical data


protection level

power supply 195÷253 V AC maximum load current (AC-1) 16 A activation threshold (adjustable) 2÷1000 lx hysteresis approx. 15 lx activation delay approx. 10 s deactivation delay approx. 20 s power consumption 0.56 W terminal 2.5 mm² screw terminals (cord) 4.0 mm² screw terminals (wire) 0.5 Nm tightening torque working temperature -25÷50°C dimensions 50x67x26 mm mounting surface

IP65


External, hermetic probe Ø10

Small, easy-to-install photosensitive sensor with 1 m cable as standard, extendable to 10 m. The cable connection should be made in a hermetic box or in a place isolated from atmospheric influences.

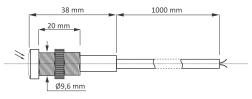

Do not lead the probe cables close to parallel live cables carrying high currents.

Power table

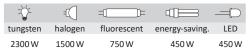

The above data are indicative and will heavily depend on the design of a specific receiver (that is especially important for LED bulbs, energy-saving lamps, electronic transformers and pulse power supply units), switching frequency and operating conditions

For more information visit: www.fif.com.pl.

Warranty

The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase. Contact your dealer or directly with us.

CE declaration

F&F Filipowski L.P. declares that the device is in conformity with the essential requirements of The Low Voltage Directive (LVD) 2014/35/EU and the Electromagnetic Compatibility (EMC) Directive 2014/30/UE. The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found at www.fif.com.pl on the product page.

E250129 - 6 -

