
Time switch AlphaRex³ D21 - 1-channel 4 126 31 / 32 / 33 - 047 61 / 63 / 6047 60



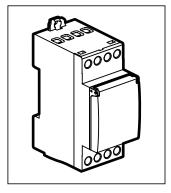

▲ Safety notes


This product should be installed in line with installation rules, preferably by a qualified electrician. Incorrect installation and use can lead to risk of electric shock or fire. Before carrying out the installation read the instructions and take account of the product's specific mounting location. Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions. All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.

The device contains a $LiMnO_2$ primary cell. When the product reaches the end of its life, this cell must be correctly removed and disposed of in accordance with national legislation and the requirements of environmental protection.

Technical data	1			
	4126 31	4126 32	4126 33	
	047 61	6047 60	047 63	
Supply voltage:	230V 50/60Hz120V 50/60Hz 24V AC/DC			_
Effective power consum	ption: Approx.	1 W		_
Contact rating:	1 changeover contact 16A 250V~ μ cos ϕ = 1			
Parallel compensation:	600W max. 70µF			_
Accuracy:	~ 0,1 s / day			- @~ -
	single strand	1	multi strand	
Terminal capacity:	1,54 mm ²		1,52,5 mm ²	max. 1,4 Nm
Programmes :	56			
Battery reserve:	5 years			
Storage ambient:	-20°C to +60°C			_
Working ambient:	-20°C to +55°C			
IP:	20			_

General information

- **Start-up**: after applying the supply voltage, the time switch starts automatically with the last selected function. The relay position is set by the current program.
- Battery backup
 - Backlighting not active
 - Data key READ/WRITE only via the menu

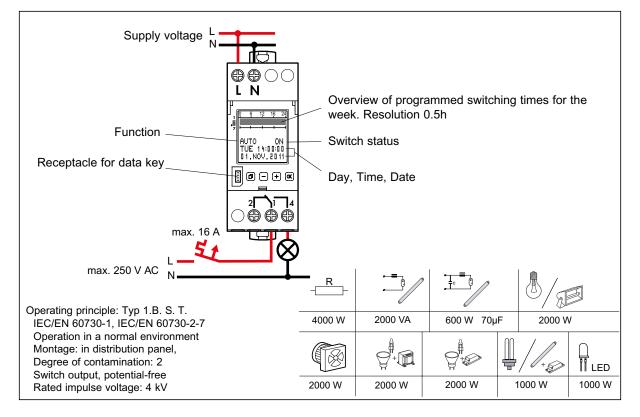



ð	Select menu, back to main menu,
	Hold down > 1s = operating display

OK Confirm selection or load parameters

—

(+) Select menu options or set parameters

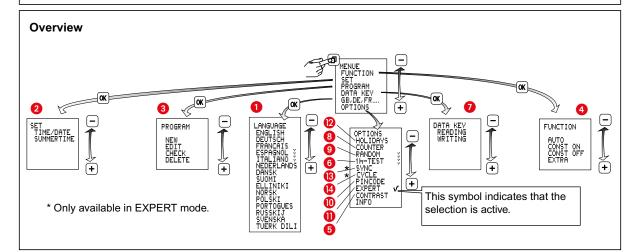

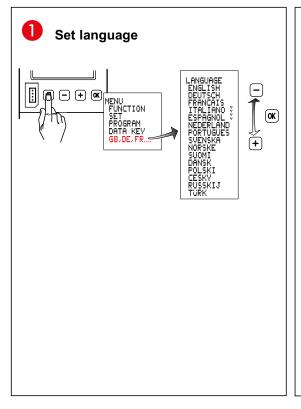


2

Set time/date, summertime/wintertime

Summertime: ± 1 hour


Europe: Factory set **SPECIAL:** The switchover to/from summertime can be freely programmed by entering a start date and end date and is then executed each year on the same day of the week, e.g. Sunday

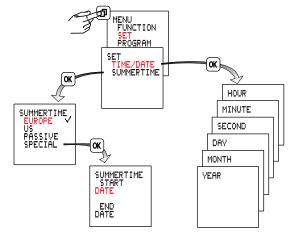

3 Programming

A program consists of an ON time, OFF time and associated on and off days.


Programs with predefined on/off days (Mon to Sun, Mon to Fri and Sat and Sun): for these programs,

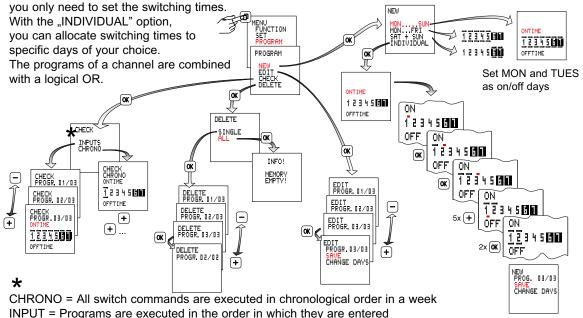


4 Modes

- Auto Automatic operation
- Constant ON
- Constant OFF
- Extra

The switch status imposed by the program is inverted (manual override). With the next effective switch command, the time switch resumes control of on/off switching.

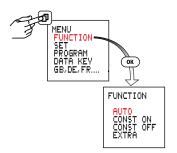

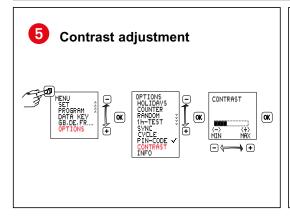



🧿 1 h-Test

When this function is activated, the output is switched on for one hour.



After one hour, the time switch returns automatically to the programmed mode.

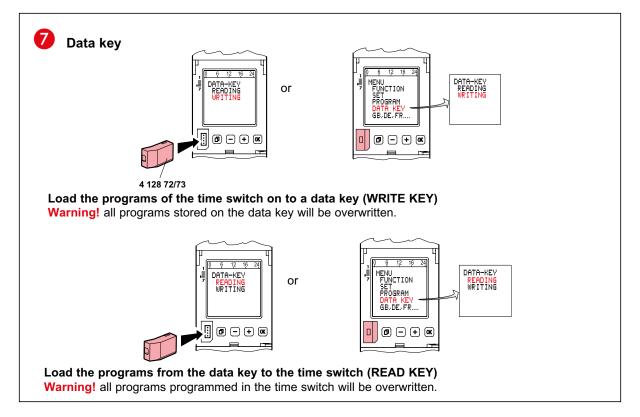

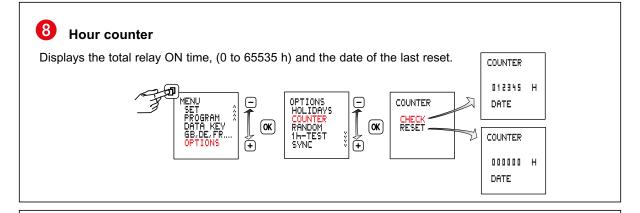


Random function

9

Function to simulate presence.


Function active: the programmed switching cycles are shifted at random within the range of \pm 15 minutes.

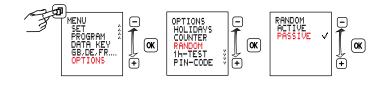



PIN CODE active: The menus of the time switch will not be accessible unless the PIN CODE has been entered. When the pin code is active, access to the button and key functions is disabled 1 minute after the last button press.

PIN free access can be re-enabled by selecting PASSIVE or by resetting the device.

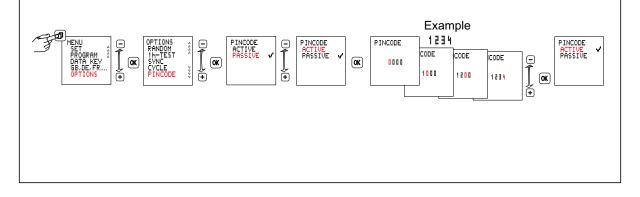

1 Expert mode

Some additional functions are available in Expert mode:


- Power grid synchronisation to improve the accuracy
- Cycle function
- Automatic channel switching

Note: Upon switching from ACTIVE to PASSIVE the additional menu items are hidden again and all the Expert mode settings are cancelled. After re-activating, Expert mode will operate again with the basic settings.





After activation the holiday program is executed between 0:00h on the start date and 24:00h on the end date (Constant ON/OFF). After the holiday program has run once, it must be reactivated.

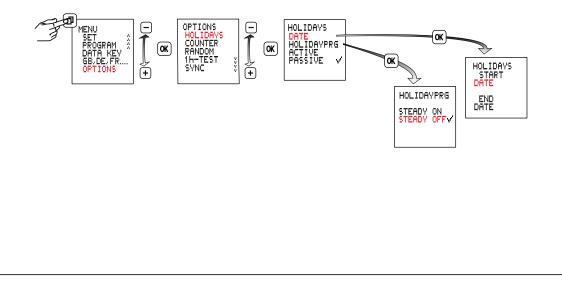

Activating and deactivating grid synchronisation

Only available in EXPERT mode.

The default setting is PASSIVE. In order to improve the long-term accuracy, it is advisable to activate synchronisation if the time switch is supplied from a on 50/60 Hz grid with frequency adjustment.







Cycle function

Only available in EXPERT mode

For cyclical switch commands the switching on time is set by logical "OR" of programs of all types. A fixed cycle of ON and OFF time then operates within those limits. The cycle always starts with the ON time. The cycle duration and the ON time within the cycle are the same length for all switching times. The cycle duration and the ON time can be set independently in one-second increments. If the switching time is shorter than the cycle duration, the cycle will be shortened accordingly. The ON time will remain unchanged. If the switching time is actually shorter than the ON time, the ON time will be shortened accordingly.

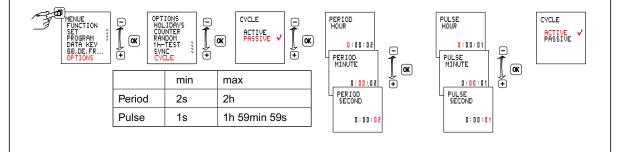

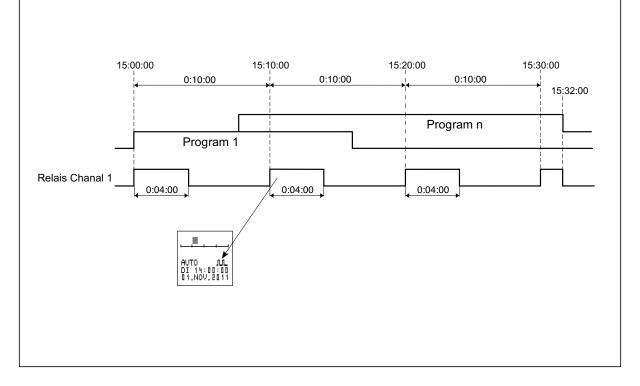


Reset

Warning!

The memory will be cleared, and all set data will be lost.

Hold down \bigcirc for more than 3 seconds and at the same time press and release \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc +.

The language, time, date, summertime/ wintertime and switching times will have to be reentered.

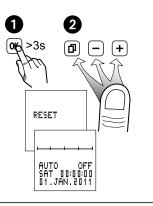

Warning: Elektrical shock - Disconnect all power from the device before dismantling the module and replacing the battery.

Always use a Li cell type battery (LiMnO₂) CR2477, 3V high temperature type min +85 $^{\circ}$ C

